



INSTALLATION GUIDE

Thank you for choosing a B-PWR product, designed by passionate riders who focus on what users really need.

1. SAFETY INSTRUCTIONS

To avoid any unfortunate situations, we recommend that you get to know how your modified vehicle handles before using it in extreme conditions.

Read all the instructions carefully before installing this product.

If you do not have the tools or technical knowledge needed to ensure proper installation, have the product installed by an authorized dealer.

⚠ WARNING

It is essential that you follow the installation procedures, possess general mechanical knowledge and use appropriate tools to ensure a safe and reliable installation of this product.

Any modifications made to your vehicle will change how it handles. Under certain conditions, you may be more likely to lose control of or overturn your modified vehicle, which could result in **SERIOUS INJURIES** or even **DEATH**. You are responsible for understanding how your modified vehicle handles. Wear protective equipment, including head protection, as required.

Improper use or installation of the product, or any modifications made to adapt the product for use in a context other than that for which it was intended, voids the warranty and may result in **SERIOUS INJURIES**.

B-PWR and all its affiliated companies, as well as its suppliers and distributors, are not responsible for any consequences whatsoever resulting from an incorrect installation or an improper use of the product.

This guide provides detailed instructions for installing the product.

AVAILABLE KIT

Ski-Doo ski Rubber X

COMPATIBILITY

Any Ski-Doo equipped with DS3 / DS4 skis, as well as this specific spindle SKU. : 505074706

⚠ WARNING

For safety reasons, this kit needs to be installed by a person with general mechanical knowledge using the proper tools.

The illustrations in this document indicate the typical structure of the various assemblies. It is therefore possible that they do not represent the exact form of the parts or the manufacturing details. These illustrations are intended to identify parts that perform an identical or similar function.

2. Vehicle preparation

- 2.1 Carefully read all the instructions prior to the installation.
- 2.2 Make sure you have enough space to properly work.
- 2.3 Make sure to have all the tool required.
- 2.4 Make sure to read your owner's manual prior to this installation.


Note: unless otherwise specified, the steps illustrated on the left side of the machine repeat themselves on the right side of the machine.

3. INSTRUCTIONS

- 3.1 Take off the ski, as well as the OEM ski rubber. Install your B-PWR ski rubber in the ski. Pay special attention to the orientation of the rubber (see picture below). The B-PWR logo must aim at the heel of the ski.



3.2 Reinstall your ski on the snowmobile. Make sure to reuse the OEM bolts and nuts in the assembly. Tighten the nut to the builder's specifications.

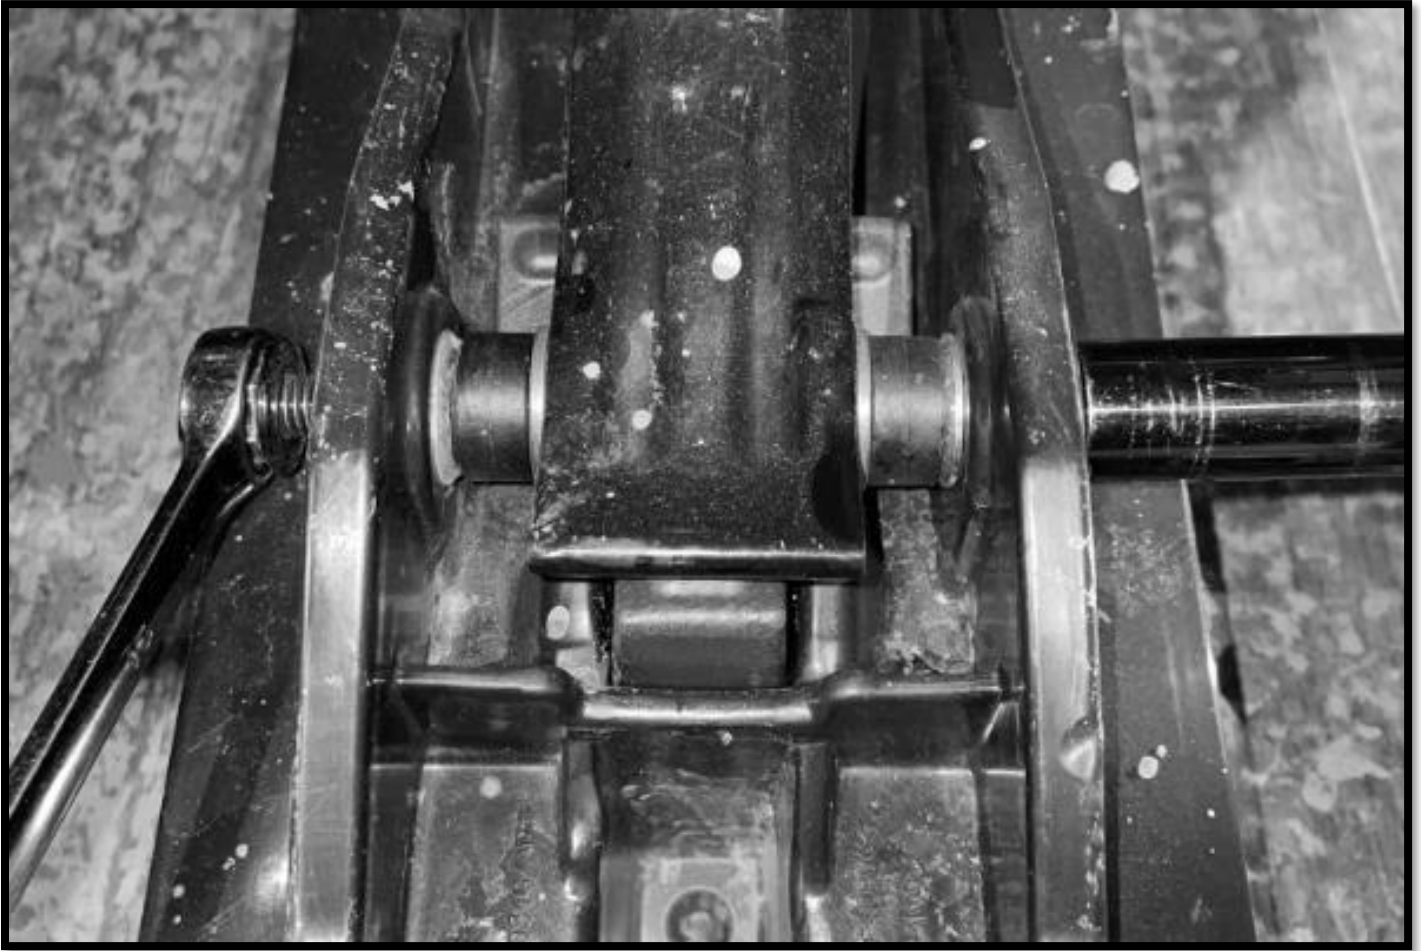

3.3 Repeat steps 3.1 and 3.2 for the second ski rubber. Don't forget to tighten the bolts and nuts.

Thank you for choosing B-PWR.